



Flexible

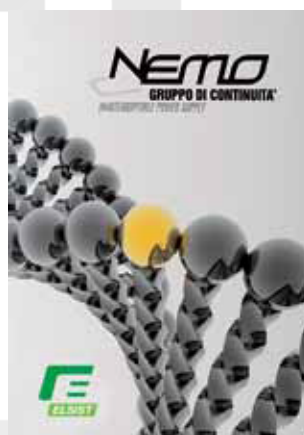

Uninterruptible Power Supply

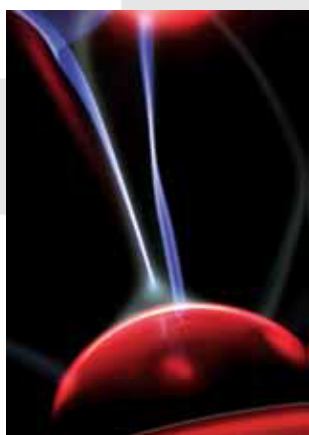

FLEXIBLE

UPS Rack - Tower, True On-line Double Conversion technology 1K - 3K

FLEXIBLE serie has 3 kind of power: 1000VA – 1500VA – 3000VA. All powers have compact dimensions, perfect to be installed into rack cabinet with 600mm maximum deep; 3000VA has 520mm max. deep.

FLEXIBLE can be installed in rack or tower side, it is a True On-line UPS with double conversion technology and DSP control (Digital Signal Processor).

Power factor is 0,9 for 1000VA, 0,8 for 3000VA, model 1500VA works with power factor 1.

It is possible to increase the back up time with additional battery packs.

USB and RS232 are standard communications ports, and also standard is RJ45 filter port.

EPO contact is included and it is possible to use SNMP o RELAY CARD (optional) with Intelligent slot port on the rear panel.

FLEXIBLE is configured with terminal block (input and output), perfect for many kind of industrial applications.

FLEXIBLE is a good and new UPS, high quality to be your best product for critical load.

Flexible

Codes	Flexible1000	Flexible1500	Flexible3000
Input			
Power	1Kva/0,9Kw	1,5Kva/1,5Kw	3Kva/2,7Kw
Kind of input	Single-phase		
Voltage	110V - 290V		
Frequency	50Hz - 60Hz +/- 10% (autodetect)		
Power factor	0,98		
Output			
Kind of output	Single-phase		
Voltage	200Vac - 240Vac		
Frequency	50Hz - 60Hz (auto sync)		
Power factor	0,9	1	0,8
Voltage Precision	1%		
Swithcing time	Zero		
THDo (output)	Thd < 3%		
Battery			
Quantity	2	3	6
Kind of batteries	12V 9Ah (standard)	12V 7Ah (standard)	12V 7Ah (standard)
Back up time	10' (possible to increase)		
Phisical			
Dimension (LxHxD)	440x86,5x430	440x86,5x430	440x131x520
Weight Ups	15,1	18	26
Display	LCD + LED		
Colour	Black		



NaiconGroup

Naicon srl Via il Caravaggio, 25 Trecella
I-20060 Pozzuolo Martesana - Milano (Italy)
Tel. +39 02 95.003.1 Fax +39 02 95.003.313
www.naicon.com e-mail: naicon@naicon.com

